



8461

SmartTouch[®]

Scale/Printer

User's Guide

©Mettler-Toledo, Inc. 2006

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Mettler-Toledo, Inc.

U.S. Government Restricted Rights: This documentation is furnished with Restricted Rights.

Unpacking Instructions for Model 8461 (Export Versions) Instrucciones de desempaque para el Modelo 8461 Instructions de Déballage pour le Modèle 8461

Refer to the illustration below.
Refiérase al dibujo más abajo.
Référez-vous à l'illustration ci-dessous.

Step 1 Remove the two screws holding the bracket, then remove the bracket.


Paso 1 Saque los dos tornillos del soporte de la araña y retire el soporte.

Étape 1 Retirez les deux vis maintenant le support, puis enlevez le support.

Step 2 Remove the cardboard from all four corners.

Paso 2 Saque el cartón de las cuatro esquinas.

Étape 2 Retirez le carton des quatre coins.

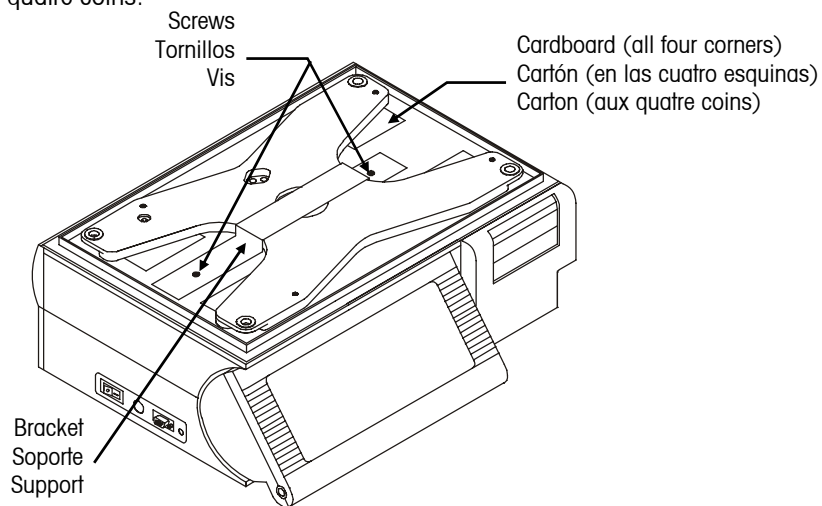


For units shipped to Australia only.
Sólo para el modelo de venta en Australia:
Uniquement pour les unités expédiées en Australie:

Step 3 Install the level indicator on the bottom of the unit.

Paso 3 Instale el indicador de nivel al pie de la unidad.

Étape 3 Installez l'indicateur de niveau en dessous de l'unité.

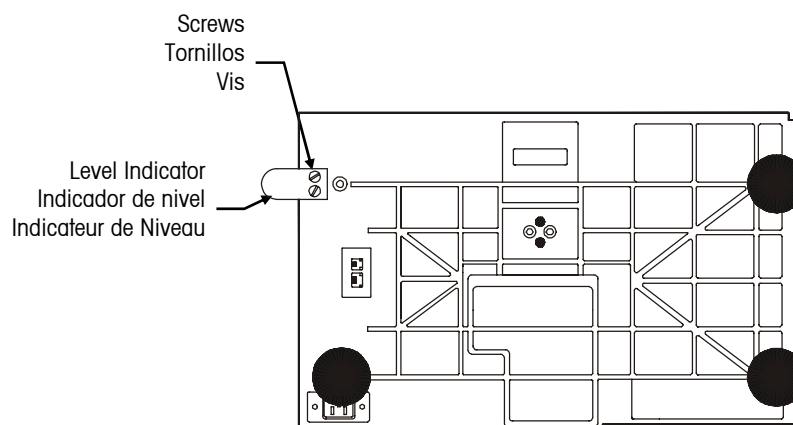

Mettler-Toledo Inc.
Columbus, Ohio

**Declaration of Conformance to SMA Standard
Production Meets Type**

(Year of Declaration 2002)



We the manufacturer of

Model	Certificate and Number	Issued by
8461	CoC 97-129	NCWM

declare in our responsibility the conformance of the above listed models and types to the mentioned certificates and the requirements of the SMA standard.

 
This declaration becomes valid when the SMA Compliance Logo, having our name or trademark is applied to the device or its accompanying documentation.

FOLD THIS FLAP FIRST



NO POSTAGE
NECESSARY IF
MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 414 COLUMBUS, OH



POSTAGE WILL BE PAID BY ADDRESSEE

Mettler-Toledo, Inc.
Retail Quality Manager - MTWR
P.O. Box 1705
Columbus, OH 43216
USA



Please seal with tape.

FCC Notice

This device complies with Part 15 of the FCC Rules and the Radio Interference Requirements of the Canadian Department of Communications. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Publication Revision History

Part Number	Date	Revisions
15038100A	10/97	New Manual
A15038100A	3/98	Added Customer Feedback form and Preset Key/Marquee Programming sections.
B15038100A	5/99	Added Export Version Unpacking Instructions. Corrected Preset Key Programming Instructions. Added new Operating Instructions in Chapter 4.
C15038100A	2/01	Added Standalone Information
D15038100A	9/01	Added Network Setup section and new Main Screen OnLine1/OnLine2 features.
D15038100A	5/03(.01)	Declaration of Conformance to SMA Standard
64056468 Rev 00	9/05	Added COOL and other new Functions and Updated Wireless/Network setup info. Added functions for Remote Plus units.
64056468 Rev 01	6/06	Updated screen shots and items for 7.2 release

PRECAUTIONS

READ this manual BEFORE operating or servicing this equipment.

FOLLOW these instructions carefully.



SAVE this manual for future reference.



DO NOT allow untrained personnel to operate, clean, inspect, maintain, service, or tamper with this equipment.

ALWAYS DISCONNECT this equipment from the power source before cleaning or performing maintenance.

CALL METTLER TOLEDO for parts, information, and service.

	 WARNING
	FOR CONTINUED PROTECTION AGAINST SHOCK HAZARD CONNECT TO PROPERLY GROUNDED OUTLET ONLY. DO NOT REMOVE THE GROUND PRONG.

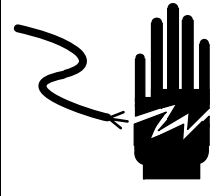	 WARNING
	Power outlets must be easily accessible and located no further than the length of the power cord supplied with the product. Failure to do so could result in result in personnel injury and/or property damage.

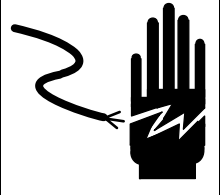	 WARNING
	DISCONNECT ALL POWER TO THIS UNIT BEFORE REMOVING THE FUSE OR SERVICING.

Disposal



In conformance with the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE) this device may not be disposed of in domestic waste. This also applies to countries outside the EU, per their specific requirements.

Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment.

If you have any questions, please contact the responsible authority or the distributor from which you purchased this device.

Should this device be passed on to other parties (for private or professional use), the content of this regulation must also be related.

Thank you for your contribution to environmental protection.

CONTENTS


1	Label Installation	1-1
2	Touchscreen Operation	2-1
	Numeric Entry Screen	2-1
	Preset Entry Screen	2-2
	Touchscreen Operation	2-3
3	Setup	3-1
	Unit Setup	3-1
	Program Presets	3-2
	Set Preset Touch Reaction	3-4
	Setup Marquee.....	3-5
	Change Time/Date.....	3-6
	Network Setup.....	3-7
4	Operating Instructions	4-1
	Quick Start	4-1
	Printing a By-Weight PLU in Service Mode.....	4-1
	Printing a By-Weight PLU in Prepack Mode	4-2
	Printing a By-Count or Standard Pack PLU Single Label	4-3
	Printing Multiple Labels for By-Count or Standard Pack PLU	4-3
	Batch Queue.....	4-4
	Zero the Scale.....	4-5
	Label Feed.....	4-5
	Calling PLU Records	4-6
	Numeric Entry Method.....	4-6
	Preset Method.....	4-6
	PLU Edit Screen	4-7
	By-Weight PLU.....	4-8
	Standard Pack PLU.....	4-9
	By-Count PLU	4-9
	Manual PLU.....	4-9
	Manual Overrides	4-10
	Manual Unit Price.....	4-10
	Manual Count.....	4-10
	Manual Total Price	4-10
	Manual Net Weight.....	4-10
	Manual Tare	4-10
	Manual Shelf Life and Use-By Date	4-10
	Manual Extra Text.....	4-11
	Operator Totals	4-11
	Memory Mode	4-12
	Totals	4-14
	Country Of Origin Labeling	4-15
	Standalone Mode DB Editor	4-18

5	Maintenance	5-1
	Before Performing Maintenance!	5-1
	External Cleaning	5-1
	Internal Cleaning	5-2


1

Label Installation


Follow the instructions below and the illustrations to install labels. (It is not necessary to unlock the printhead to load labels). The labels can be loaded in a stripped mode or unstripped mode. The default is stripped mode. This must also match the DELIVERY option in **Printer Setup**.

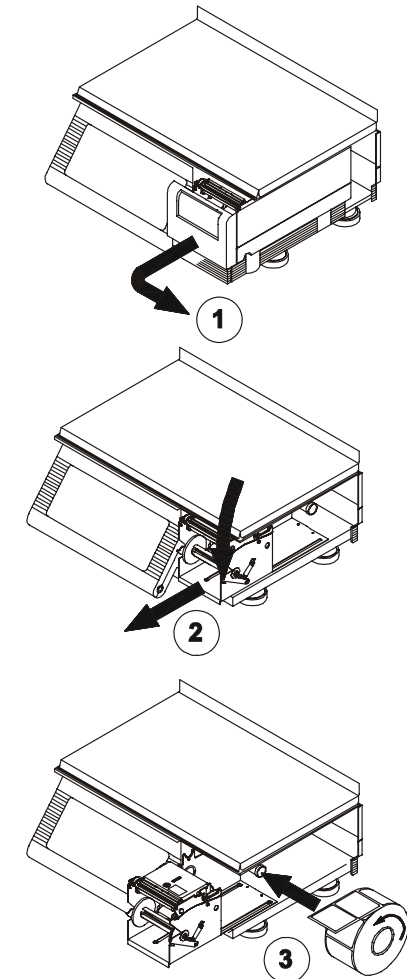

1. Remove the Printer Door.
2. Press the Release Lever and pull the printer forward.
3. Install the labels on the supply spool.
4. Press the release lever. If installing for unstripped mode, skip to Step 7.
5. Remove the liner take-up spool from the printer mechanism.
6. Slide the two halves of the liner take-up spool apart and discard any spent liner.
7. Insert the end of the paper into the rear chute and through the Gap Sensor. Feed labels into the chute until they stop at the platen roller.
8. Touch the ENTER or ENTER/PRINT key to feed the labels, while gently pushing the label stock into the rear chute until the label feeds out the front of the mechanism. If the label stock will not feed out the front, there may be a label jam inside the mechanism. In this case, unlock and lift the printhead to clear the jam. If the delivery method is unstripped you are done loading labels and can push the printer back in until it locks and install the printer cover.
9. If you are using loading labels in a stripped delivery mode, insert the label liner through the fingers of one half of the liner take-up spool.
10. Reassemble the two halves of the liner take-up spool.
11. Reinstall the liner take-up spool into the printer mechanism.
12. Wind the spool upwards until the slack is taken up on the liner. When complete, slide the printer back inside until the locking lever engages and reinstall the printer cover.

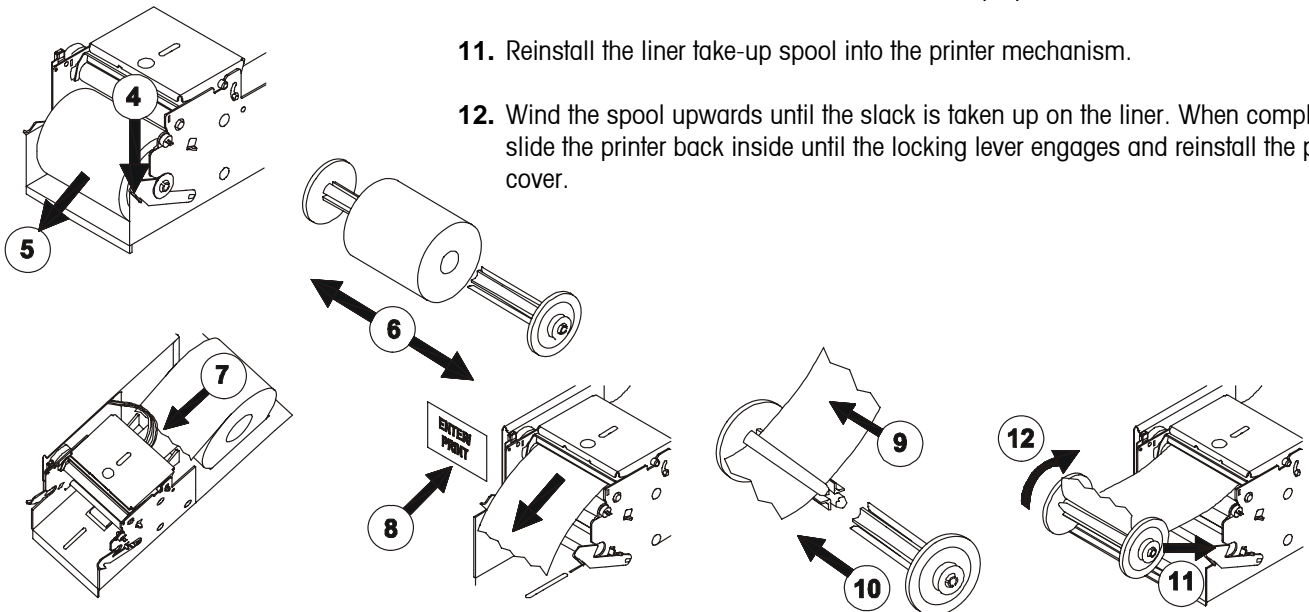

After installing the labels, select the label size as shown below. Refer to the Model 8461 Service Manual for information on programming custom labels.

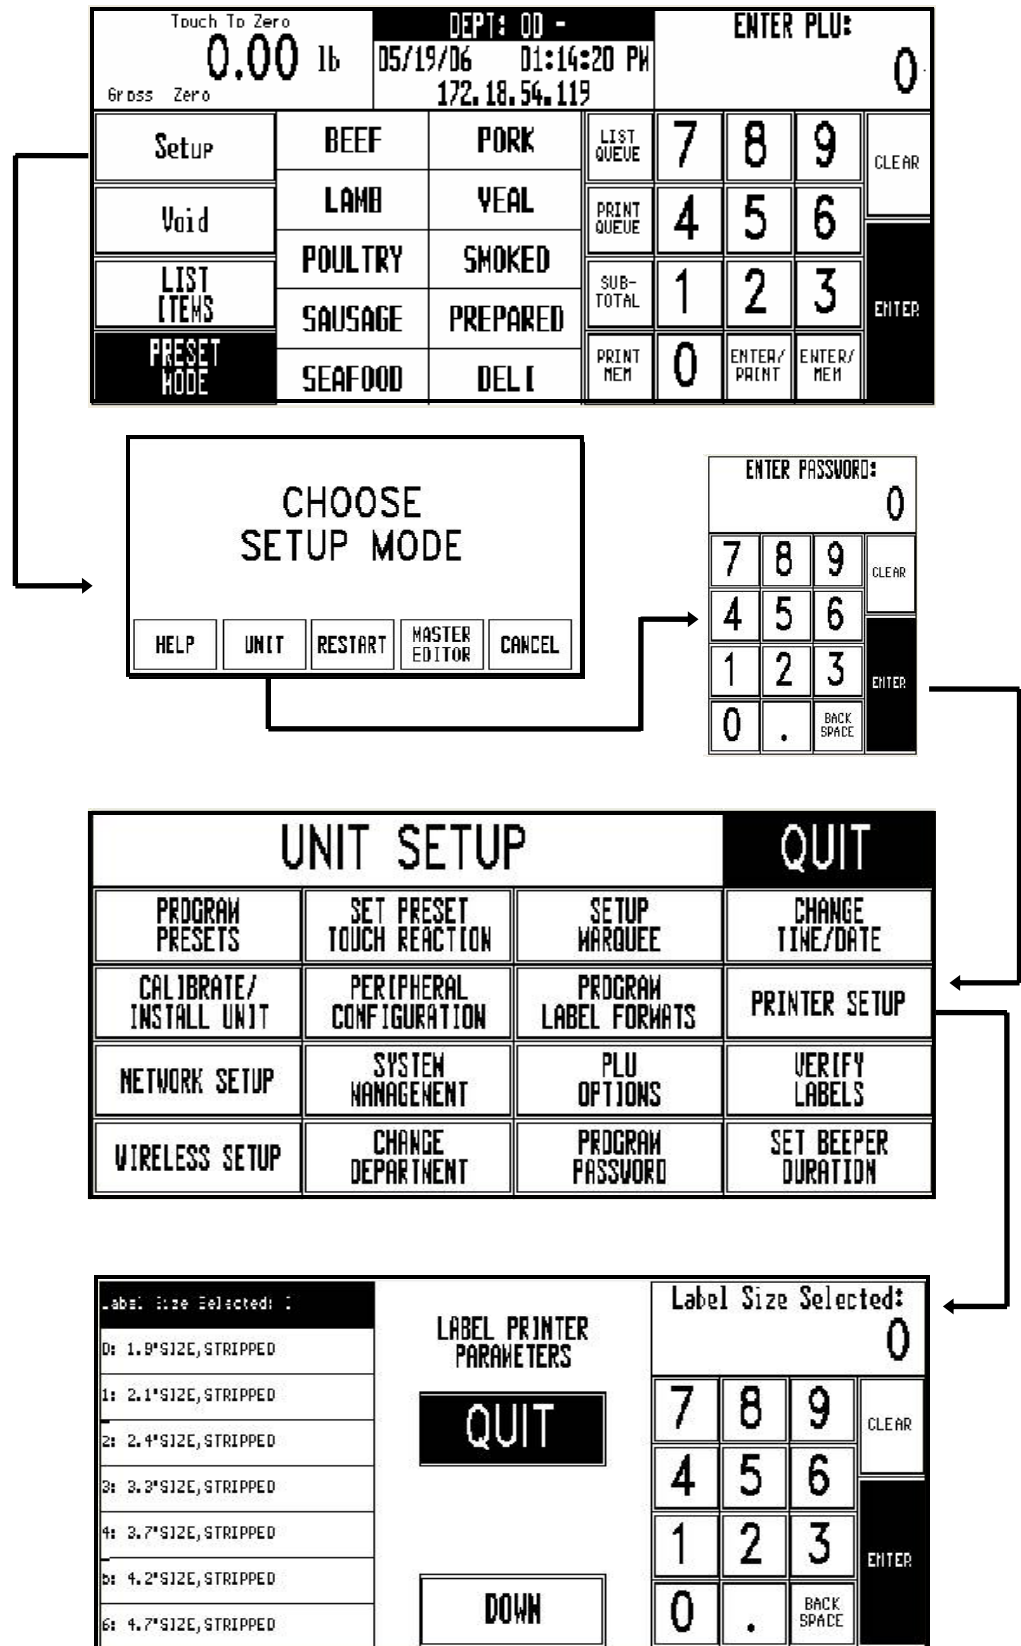

2

Touchscreen Operation

Numeric Entry Screen

The screenshot shows the Numeric Entry Screen with the following elements and callouts:

- Top Left:** "Indicates scale is Zero" points to "0.00 lb". "Touch to zero the scale." points to "Touch To Zero". "Gross indicates no tare is taken. Net indicates weight is net (tare taken)." points to "Gross Zero".
- Top Center:** "Off-Line indicates communication problem." points to "Off-Line". "Current Department Name and Number." points to "DEPT: 00 -". "Time and Date" points to "05/19/06 01:14:28 PM". "Network IP" points to "172.18.54.119".
- Top Right:** "ENTER PLU:" is followed by "0". "If BATCH QUEUE is enabled, the LIST QUEUE will show the current queue list. PRINT QUEUE will print the batch." points to the queue list area.
- Left Column:** "Press here for Help" points to "Help". "Motion indicates the weight has not stabilized." points to "Motion". "Accesses Unit Setup Mode or Master Editor." points to "Setup". "VOID will delete accumulator values from totals for a previous transaction." points to "VOID". "Lists backup PLUs for the current department. Press the PLU to select for a transaction." points to "LIST ITEMS". "Switches to Preset Mode" points to "PRESET MODE".
- Center Grid:** "Selects a preset page for display" points to "BEEF", "LAMB", "POULTRY", "SAUSAGE", "SEAFOOD", "PORK", "YEAL", "SMOKED", "PREPARED", "DELT".
- Right Column:** "Numeric Entry keys 0-9." points to the numeric keypad. "CLEAR is used to: Erase an incorrect entry. On some menus, to indicate you are finished. Return to the previous screen." points to "CLEAR". "ENTER is used to Enter a PLU and advance to the PLU Edit Screen. When no PLU is entered, it will feed a blank label." points to "ENTER".
- Bottom:** "ENTER/PRINT is used to call a PLU and automatically print a label. When no PLU number is entered, it will feed a blank label." points to the keypad. "If Memory is active, the ENTER/PRINT key will split into two keys. The new key adds a transaction to memory." points to the split keys. A small inset shows the split keys: "ENTER/PRINT" and "ENTER/MEM".

Figure 2-1: Numeric Entry Screen

Preset Entry Screen

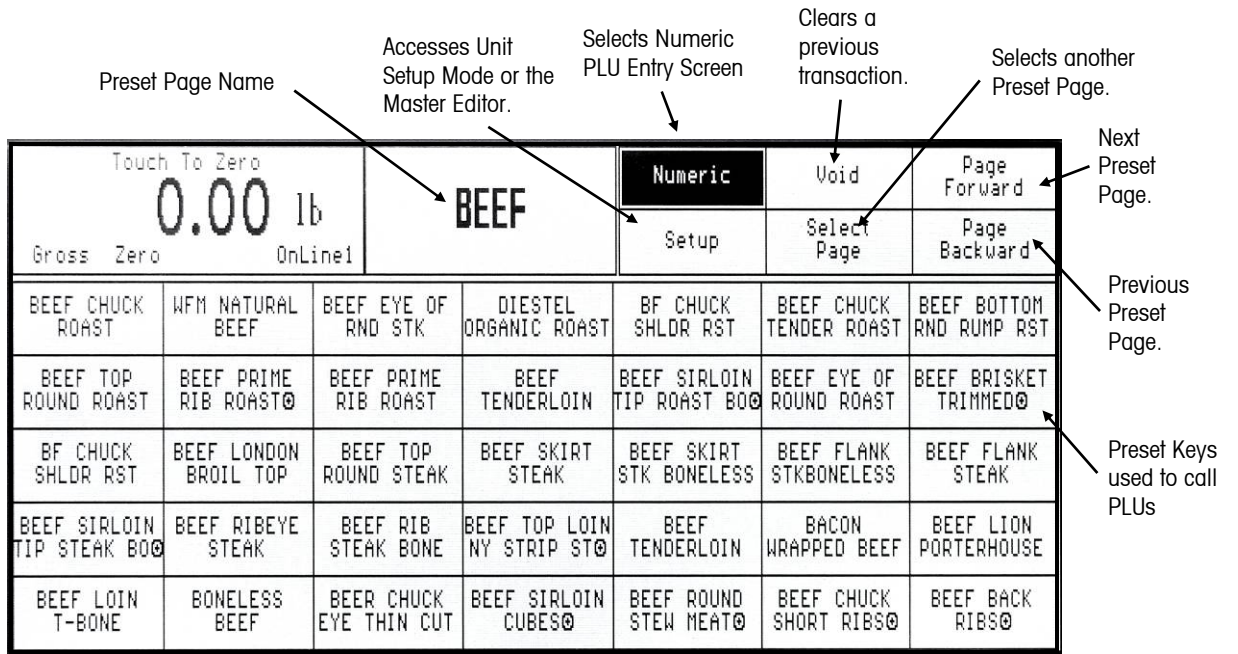


Figure 2-2: Preset Entry Screen

Touchscreen Operation

Do not press on the Touchscreen. Use only a light touch for key entry.

Do not use a hard or sharp object to make key entries. This can scratch or damage the Touchscreen and lens.



The Model 8461 Touchscreen is both a display and keyboard. The keyboard part of the Touchscreen does not use conventional keys, but instead senses where the fingertip is placed on the screen for key input. Only a light touch within the key area (Figure 2-5) is required.

For best results, the fingertip must enter at a right angle (Figure 2-3) to touch the key area, and then must be withdrawn beyond the black lens surrounding the Touchscreen (Figure 2-5) before making the next key entry. When touching the keys, make sure no other finger drags on the screen. This would prevent the Model 8461 from correctly sensing the fingertip.

Your thumb may not produce good results, especially if it is larger than the key (Figure 2-4). Wearing gloves may also not produce the best results if the gloves are larger than the key area. Remember; do not press on the keys. Just a light touch is all that is required.

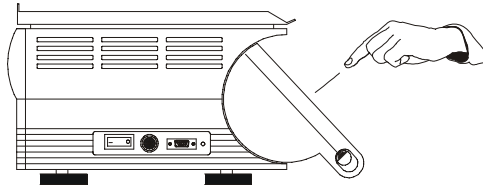


Figure 2-3: For Best Results, Use Fingertip

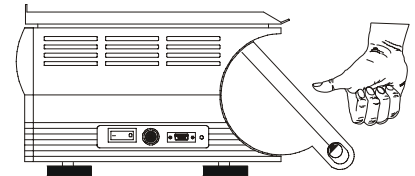


Figure 2-4: Thumb may not work

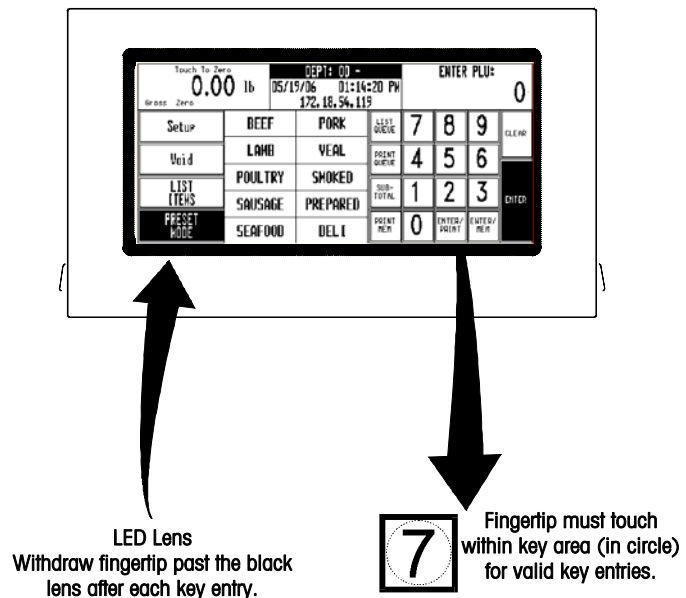


Figure 2-5: LED Lens and Key Area

METTLER TOLEDO

For your notes

3

Setup

Unit Setup

Touch the **SETUP** key to access the Unit Setup Screen (Figure 3-1).

If no password has been configured, the ENTER PASSWORD screen will be bypassed. There are two levels of access: Supervisor or Operator. Supervisor allows entry into all of the setup functions. Operator password allows access only to functions that the supervisor allows and disabled functions are indicated by grayed key areas.

Instructions may be valid with only one version scale and will be pointed out in the manual. The terms "SmartTouch® Master" or "Master" will represent the SmartTouch® Master that can be installed in any satellite. The acronym STEM stands for SmartTouch® Ethernet Master.

DB

DB displays for the standalone mode.

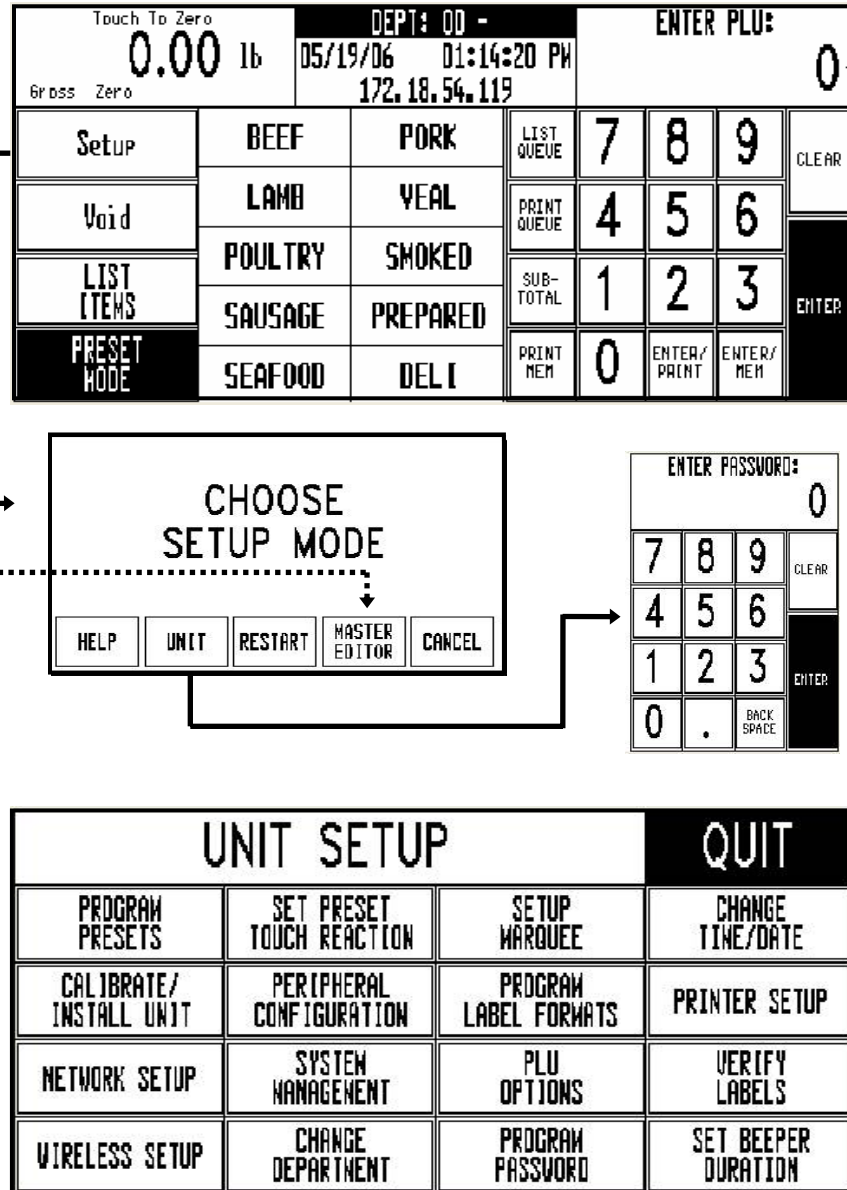


Figure 3-1: Unit Setup

The following sections describe the different options available under **Unit Setup**.

Program Presets

Preset Keys allow calling a PLU record with one touch of a programmed key. From the Unit Setup screen, touch PROGRAM PRESET KEYS to bring up the PRESET PAGES edit screen (Figure 3-2). Each of the 10 pages can contain up to 35 preset keys for a total of 350 presets.

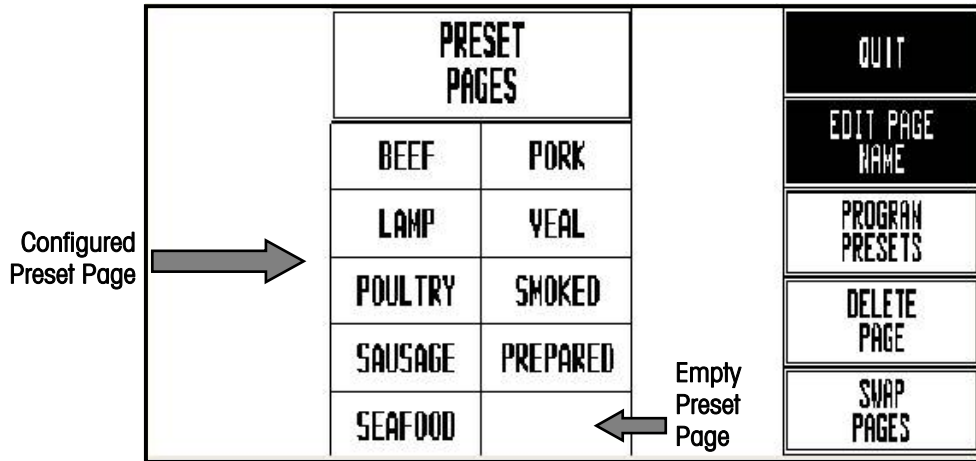


Figure 3-2: Program Presets Screen

Delete

To **delete** an entire Preset Page, touch the DELETE PAGE key, then touch the page you wish to delete. Complete or cancel the deletion as prompted.

Swap

To **swap** preset page key positions, touch the SWAP PAGES key, then touch the first key you want to swap followed by the second key you want to swap.

Edit

To **edit** the page name, touch EDIT PAGE NAME, then touch the key you wish to edit. Type the name you wish to appear on key. Use the BACKSPACE key to delete existing characters, or SHIFT BACKSPACE to delete a complete line. One line of 7-8 large characters or two lines of 10 characters can be displayed. To move to the second line, touch NEW LINE.

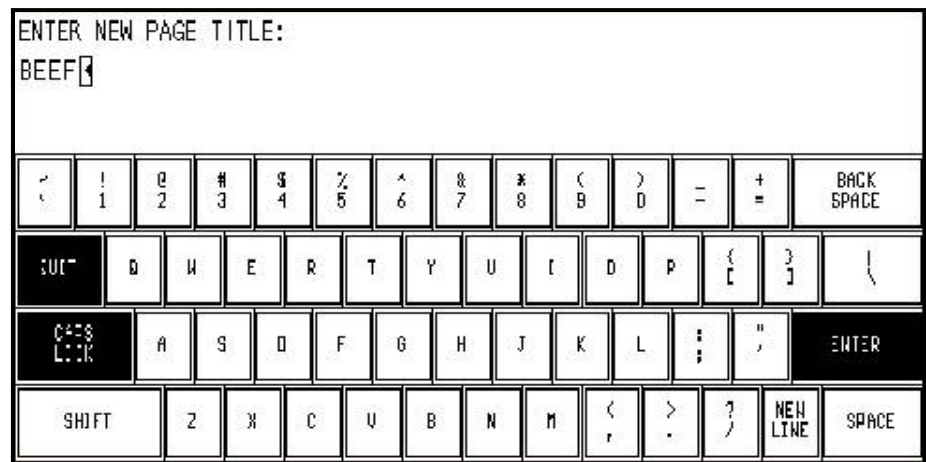


Figure 3-3: Keyboard to edit Preset Page Names

To **program** PLUs into a page, touch PROGRAM PRESETS, then touch one of the ten preset page keys (Figure 3-2). The Preset Menu shown in Figure 3-4 will then appear.

Touch the department box to select a new department.

Touch EDIT, then the preset key to add or edit a preset.

DELI		BEEF		EDIT		QUIT	
				DELETE			
				SWAP			
BEEF CHUCK ROAST	WFM NATURAL BEEF	BEEF EYE OF RND STK	DIESTEL ORGANIC ROAST	BF CHUCK SHLDR RST	BEEF CHUCK TENDER ROAST	BEEF BOTTOM RND RUMP RST	
BEEF TOP RND ROAST	BEEF PRIME RIB ROAST	BEEF PRIME RIB ROAST	BEEF TENDERLOIN	BEEF SIRLOIN TIP ROAST BO	BEEF EYE OF ROUND ROAST	BEEF BRISKET TRIMMED	
BF CHUCK SHLDR RST	BEEF LONDON BROIL TOP	BEEF TOP ROUND STEAK	BEEF SKIRT STEAK	BEEF SKIRT STK BONELESS	BEEF FLANK STKBONELESS	BEEF FLANK STEAK	
BEEF SIRLOIN TIP STEAK BO	BEEF RIBEYE STEAK	BEEF RIB STEAK BONE	BEEF TOP LOIN NY STRIP ST	BEEF TENDERLOIN	BACON WRAPPED BEEF	BEEF LION PORTERHOUSE	
BEEF LOIN T-BONE	BONELESS BEEF	BEEF CHUCK EYE THIN CUT	BEEF SIRLOIN CUBES	BEEF ROUND STEH HEAT	BEEF CHUCK SHORT RIBS	BEEF BACK RIBS	

Figure 3-4: Program Presets Menu

To change the **department** that you are selecting PLUs from, touch the DEPARTMENT box (upper left corner). A list of the departments with descriptions will display. Page through the list to find the desired department and touch to select it.

Delete

To **delete** an existing preset key, touch DELETE (at the top of the screen) followed by the preset key you wish to delete. Complete or cancel the deletion as prompted.

Swap

To **swap** the key locations of two preset keys on the preset page, touch SWAP (at the top of the screen), then touch the first key you want to swap followed by the second key you want to swap.

Add / Edit

To **add** a new preset key or **edit** an existing preset key, touch EDIT followed by the preset key you wish to program. The numeric keyboard will display. Type in the PLU number or touch LOOK-UP to generate a list of PLU numbers from the current department. Page through the list of PLUs to locate the item and touch to select it.

The alphanumeric keyboard will display, and the preset key description for the item will show in the upper left hand corner of the display. The second line of text in the left-hand corner is the description editor. On new preset keys, the preset key description will default to the PLU description. If four lines of description are available, only the first line will show up on the preset keys.

Use the keyboard to edit the preset key description. The BACKSPACE key erases one character at a time, and SHIFT BACKSPACE erases the complete line. Up to three lines of 12 characters per line are allowed. Touch the ENTER key when you are finished.

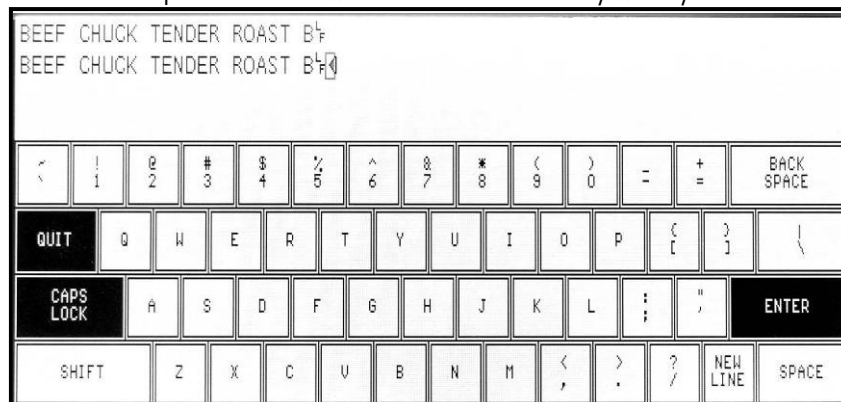


Figure 3-5: Keyboard to enter Preset Key Names

Set Preset Touch Reaction

PRESET TOUCH REACTION configures how the preset keys react when touched.

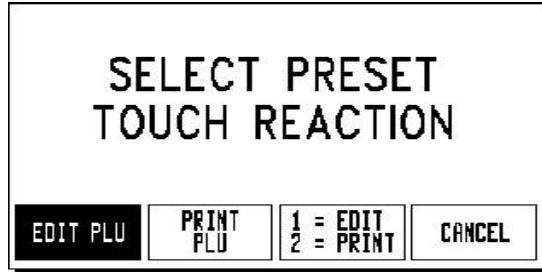


Figure 3-6: Preset Touch Reaction

EDIT PLU	When a preset key is touched the PLU Edit screen displays, allowing the user to make changes, then touch PRINT.
PRINT PLU	When a preset key is touched it will call the PLU and automatically print a label. The PLU Edit screen is bypassed.
1 = EDIT 2 = PRINT	Touch the preset key once to call the PLU and display the PLU Edit screen. Touch the preset key twice in rapid succession to bypass the PLU Edit screen and the print automatically.
CANCEL	Cancels operation and returns to the UNIT Setup screen

Setup Marquee

From the Unit Setup screen, touch SETUP MARQUEE to display the Marquee Setup screen (Figure 3-7). The messages shown on the Marquee list will scroll on the customer display when the marquee is active. Any changes made at the unit will not affect the marquees stored in the master/server database. The marquee starts automatically if there is no activity on the unit after approximately 10 seconds. When the Touchscreen is touched, or if weight is added to the platter, the marquee will be suspended.

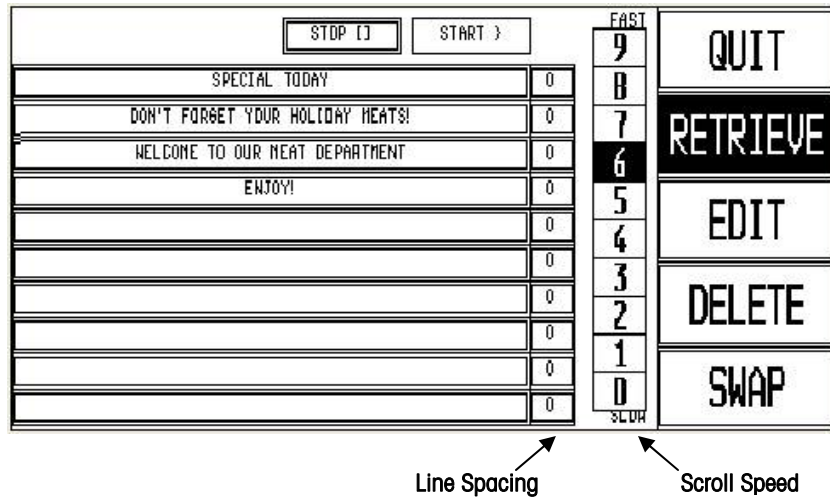


Figure 3-7: Setup Marquee Screen

- Retrieve** To retrieve a marquee from the master/server database, first touch RETRIEVE, and then touch any of the 10 boxes to the left. Touch the desired action code to select it. If no marquees (Type 3 Action codes) were located at the master/server, a blank list is displayed.
- Edit** To edit or create a message, touch the EDIT key and marquee box you wish to edit.
- Delete** To delete a message, touch the DELETE key followed by the marquee message you wish to delete.
- Swap** To swap the position of a marquee with another, touch SWAP, touch the marquee to move, then touch the new location.
- 0-9 (Scroll Speed)** To adjust the marquee scrolling speed, change the number in the FAST/SLOW column by touching the desired speed 0-9.
- Start/Stop** Starts or stops the marquee for testing purposes.
- Line Spacing** Change the number of blank spaces between the messages.

Change Time/Date

From the Unit Setup screen, touch CHANGE TIME/DATE to bring up the Time and Date screen (Figure 3-8). To make changes, touch the appropriate menu option window and follow the instructions indicated below.

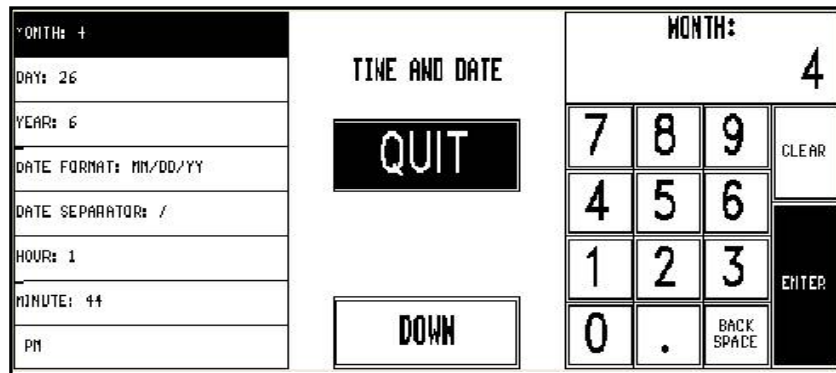


Figure 3-8: Change Time/Date

- Month** Numeric month 1-12.
- Day** Numeric day 1-31.
- Year** Last two digits of the current year 00-99.
- Date Format** Date format (MM/DD/YY, DD/MM/YY, YY/MM/DD, or YY/Mon/DD).
- Date Separator** Select /, -, or .
- Time Format** Select either 12 or 24 hour formats.
- Hour** Current hour (1-12) through the numeric keyboard.
- Minute** Current minute (00 - 59) through the numeric keyboard.
- PM/AM** Select AM or PM by touching the appropriate window.
- Time Format** Select between 12 or 24 hour formats.
- Send Time & Date To Master** (Touch DOWN to display)
Sends the time and date to a **SmartTouch**[®] master or STEM.
- SYNC From Master** If set to YES, the time will be obtained from the master when the UC-ST is powered up. Setting to NO will disable this function. (RemotePlus Versions)

Network Setup

If the network is local, arbitrary numbers can be selected for the IP Address. An IP Address consists of a group of four numbers from 0 to 255, separated by periods, for example: 207.142.140.101. Do not duplicate numbers on the network. To enter the numbers, key in the numbers starting at the MSD (left Most Significant Digit) number. The periods are not entered in this procedure. Enter numbers lower than 100 with preceding zeros (Example: 10 is entered as 010). To exit without saving, touch CLEAR.

Power the unit down after changing the IP address for the new changes to take effect.

On Client Software Revision 5.5, the client will ping the network for the Scale IP that it is configured for. If a duplicate IP is found on the network, the message "DUPLICATE IP ADDR" will display. You must then change the IP address to a unique address on the network before the client can access the master database.

Client, Standalone Client, RemotePlus

The network configuration is set up for the Client (Software Revision 5.5 or later) on the Unit Setup Screen under NETWORK SETUP.

Note: For older versions, the network configuration is accessed under the "Calibrate/Install Unit" button. To enter setup mode, touch SETUP, UNIT, NETWORK SETUP.

The last three items are RemotePlus functions only. Standard versions will not display a third screen.

NETWORK: AUTOMATIC SCALE IP: 172.018.054.119 SCALE PORT: 2305 SCALE NAME: SCALE MAC: 00-E0-7C-01-AF-B7 SERVER: AUTOMATIC SERVER IP: 000.000.000.000 SERVER NAME:	NETWORK CONFIGURATION QUIT DOWN	AUTOMATIC MANUAL
---	--	---------------------------------

SERVER NAME: BACKUP IP: 255.255.255.000 BACKUP NAME: SUBNET MASK: 255.255.254.000 ROUTER: 172.018.054.001 DHCP SERVER: 172.018.054.002 DNS SERVER: 172.018.048.020 MANUAL TFTP SERVER:	NETWORK CONFIGURATION QUIT UP DOWN	ENTER
---	--	-------

Remote
Plus

MANUAL TFTP SERVER: MANUAL TFTP PORT: 69 MANUAL BOOTFILE:	NETWORK CONFIGURATION QUIT UP	MANUAL TFTP SERVER: 207.142.140.199 <table border="1"> <tr> <td>7</td><td>8</td><td>9</td><td rowspan="2">CLEAR</td> </tr> <tr> <td>4</td><td>5</td><td>6</td> </tr> <tr> <td>1</td><td>2</td><td>3</td><td rowspan="2">ENTER</td> </tr> <tr> <td>0</td><td>/</td><td></td> </tr> </table>	7	8	9	CLEAR	4	5	6	1	2	3	ENTER	0	/	
7	8	9	CLEAR													
4	5	6														
1	2	3	ENTER													
0	/															

Figure 3-9: Network Setup Screens

The network setup functions are described in the following section.

On Software Revision 5.5, the client will ping the network for the Scale IP that it is configured for. If a duplicate IP is found on the network, the message "DUPLICATE IP ADDR" will display. You must then change the IP address to a unique address on the network before the client can access the master database.

You must first select the network boot type, **Manual** or **Automatic**. Automatic is the default. Automatic will use DHCP to automatically obtain the network boot information from a DHCP server. The parameter details are explained below.

NETWORK	<p>When Automatic is selected, the DHCP and BOOTP features will be used. The "SERVER IP", "SERVER MAC", "SUBNET MASK", "ROUTER", "DHCP SERVER", and "DNS SERVER" fields will display but cannot be changed. The administrator must make sure the correct data is available on the network server and the DHCP server points each client to the correct locations. With this setup, administrators can abstract and group scales in logical groups. Each group can have their own software and data settings, eliminating the need to configure each scale individually.</p> <p>If Manual is selected, then the DHCP feature is disabled and the TCP/IP parameters and BOOTP parameters must be entered manually. The "Server MAC" field will display but no changes are allowed. The "DHCP Server" and "DNS Server" fields will display but changes are not allowed to these fields.</p> <p>If a scale is set to boot Manual, then there is no network query for boot information when the scale powers up. Booting follows the path of whatever data configured on the scale. The administrator must access each scale with a manual setting on an individual basis. This feature will allow the ease of administration that a centralized, networked based boot system provides, but not require DHCP services. The Boot sequence of a scale set to a manual Boot Sequence will follow the boot sequence of the Automatic setting excluding the DHCP portion. In addition, this also allows a remote person (administrator, field support), to update software and data on the scale through a 'runonce' boot sequence change. This would allow them the ability, with the coordination of scale network administrator, to change configurations and software from a remote location.</p>
SCALE IP	<p>This is the standalone IP address. If the "Network" is set to "Automatic" this field cannot be changed. If the "Network" is set to "Manual" then this field may be changed. The IP address is entered as four sets of numbers called octets consisting of three digits. The address is entered one octet at a time. A decimal point will appear after every three numbers are entered. When there are only 1 or 2 digits in an octet, fill in with zeros. For example, 1 is entered as 001. The default value for this field is 255.255.255.000.</p>
SCALE PORT	<p>Used in the standalone mode. This is the TCP/IP Host Port number used to communicate with the Standalone scale.</p>
SCALE NAME	<p>This is the local domain name to given to the standalone scale. Devices on the network can reference the scale by using this name.</p>
SCALE MAC	<p>Hardware Media Access Control (MAC) address. Each Ethernet device has a unique 6-byte MAC address. This field is displayed but cannot be changed.</p>
SERVER	<p>Select Automatic or Manual. If you wish to set the Subnet Mask and Router fields, set this function to Manual.</p>
SERVER IP	<p>This may be displayed, but is not used in the standalone mode.</p>
SERVER NAME	<p>This may be displayed, but is not used in the standalone mode.</p>

BACKUP IP	If the database located at SERVER IP is un-available, the client will attempt to locate the record at the Backup IP location. The IP address is entered one octet at a time.
BACKUP NAME	This is the name of the location entered as the Backup IP.
SUBNET MASK	The mask that is used to identify the local network when accessing an IP address on the Ethernet network. If the "Network" is set to "Automatic" this field cannot be changed. If the "Network" is set to "Manual" thee field may be changed. The mask is entered one octet at a time. The default value is 255.255.255.000.
ROUTER	The router's (default gateway) IP address. The router is used when accessing devices outside of the local network. If the "Network" is set to "Automatic" this field cannot be changed. If the "Network" is set to "Manual" this field may be changed. The IP address is entered one octet at a time. The default value is 255.255.255.000.
DHCP SERVER	Display only. This is the current IP address of the local network's DHCP server. This field only displays when the "Network" is set to "Automatic" and cannot be changed.
DNS SERVER	Display only. This is the current IP address of the local network's DNS server. This field only displays when the "Network" is set to "Automatic" and cannot be changed.
MANUAL TFTP SERVER	The TFTP Server (Trivial File Transfer Protocol) is the location of the network boot files for the scale that can include application software and configuration data.
MANUAL TFTP PORT	The default port is 69. This setting can be changed by the system administrator if needed.
MANUAL BOOTFILE	This is the file name of the application or configuration file that will be downloaded to the scales.

Remote
Plus

METTLER TOLEDO

For your notes

4

Operating Instructions

Quick Start

This section provides a quick reference for some common procedures.

Printing a By-Weight PLU in Service Mode

1

Place the item on the scale and either enter the PLU number and press ENTER on the numeric screen,

or

Press the Preset Key for the item on the Preset Mode Screen.

Numeric Mode Screen

Touch To Zero		DEPT: O - MEAT		ENTER PLU:	
Gross	0.00 lb	11/28/05	03:30:06 PM	1234	
zero		146.256.010.1			
Setup	BEEF	PORK	7	8	9
Void	LAMB	VEAL	4	5	6
LIST ITEMS	POULTRY	SMOKED	1	2	3
PRESET MODE	GRNDS SAUSAGE	GOURMET	0	ENTER/PRINT	
	SEAFOOD FRESH	SEAFOOD SHELLFISH			

Preset Mode Screen

Touch To Zero		Fresh Seafood		Numeric	Void	Page Forward
Gross	1.92 lb			Setup	Select Page	Page Backward
zero						
Shrimp Large	Ocean Flounder	Atlantic Salmon	Mackerel Spanish	Crab Whole	Oysters Atlantic	Prawns Pacific
Shrimp Medium	Orange Roughly	Swordfish Fillets	Mahi mahi	Lobster Large	Crab King	Halibut Pacific
Trout Lake	Califish Farm Raised	Tuna Albacore	Haddock Pacific	Salmon Pink	Crab Legs	Sole Atlantic
Trout Farm Raised	Alaska Cod	Perch Golden	Pollock Alaska	Trout Rainbow	Seafood Salad	Salmon Sockeye
Snapper Red	Flounder Yellowtail	Perch Pacific	Shark Fillets	Scallops Atlantic	Clams Atlantic	Shrimp Gulf Pink

2

At the PLU Edit Screen, press the PRINT key to print the label.

Touch To Zero		TARE WEIGHT	UNIT PRICE	TOTAL PRICE (\$)
Net	1.90 lb	0.02 (lb)	7.89 - \$ / lb -	\$14.99
PLU DESCRIPTION		SERVICE	CLEAR	
Trout, Lake		GRADE	MEMORY	
Fresh Catch of the Day		LABEL FORMAT	PRINT	
PACK DATE	SHELF LIFE	USE BY DATE	AUTO	
10/23/05	10/28/05	10/31/05		
Easy to Grill Mainmade for four hours covered in the refrigerator. Grill on both sides for 5 minutes each.				


3

Take the label and remove the item. The scale will automatically clear the PLU and return to the home screen.

LAKE TROUT		
1.90 lb	\$7.89/lb	\$14.99
Fish Mart		

Printing a By-Weight PLU in Prepack Mode

1

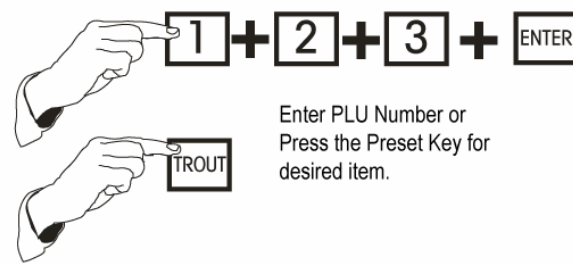

Enter PLU Number or Press the Preset Key for desired item.


2

1.90 lb	0.02	7.89/lb	Total Price \$14.99
PLU DESCRIPTION Trout, Farm Raised		SERVICE	CLEAR
PACK DATE 1/23/2014	PROD. DATE 1/23/2014	GRADE	COOL
EAT BY DATE Indicates the time frame covered by the manufacturer. Use as both dates for 2 separate weeks.		LABEL FORMAT	MEMORY
		AUTO	PRINT

On the PLU Edit Screen, If SERVICE is displayed, press the button to toggle to PREPACK. With PREPACK displayed, place the first item on the scale platter.


1.90 lb	0.02	7.89/lb	Total Price \$14.99
PLU DESCRIPTION Trout, Farm Raised		PREPACK	CLEAR
PACK DATE 1/23/2014	PROD. DATE 1/23/2014	GRADE	COOL
EAT BY DATE Indicates the time frame covered by the manufacturer. Use as both dates for 2 separate weeks.		LABEL FORMAT	MEMORY
		AUTO	PRINT

3



Place the item on the scale. In Prepack Mode, the label will print automatically.

4

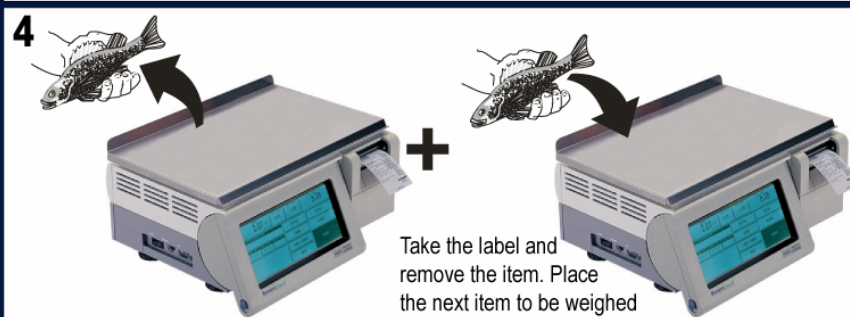

Take the label and remove the item. Place the next item to be weighed on the platter. Continue until all items have been weighed.

5

CLEAR


=

0.00 lb


ENTER PLU: 0

Press Clear to end the run.

Printing a By-Count or Standard Pack PLU Single Label

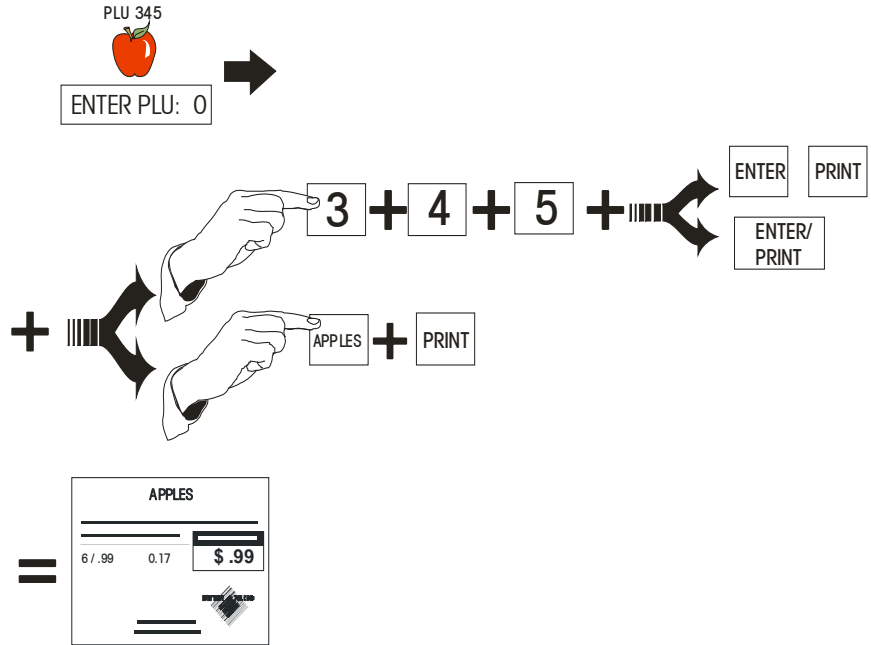


Printing Multiple Labels for By-Count or Standard Pack PLU

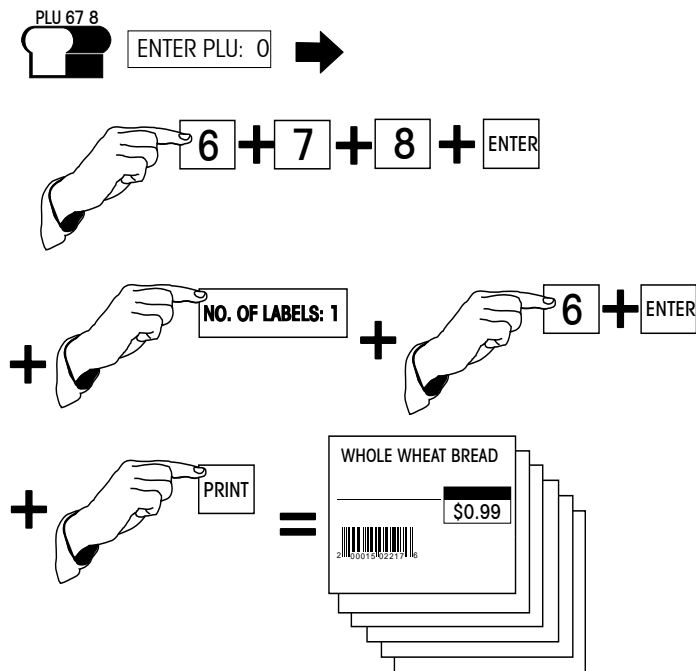


Batch Queue

This procedure is used to print batches of different labels. To print Nutrition Facts or Extra Text labels, use the key before touching the QUEUE key to select the Extra Text or Nutrition Facts label formats located at the end of the formats list.

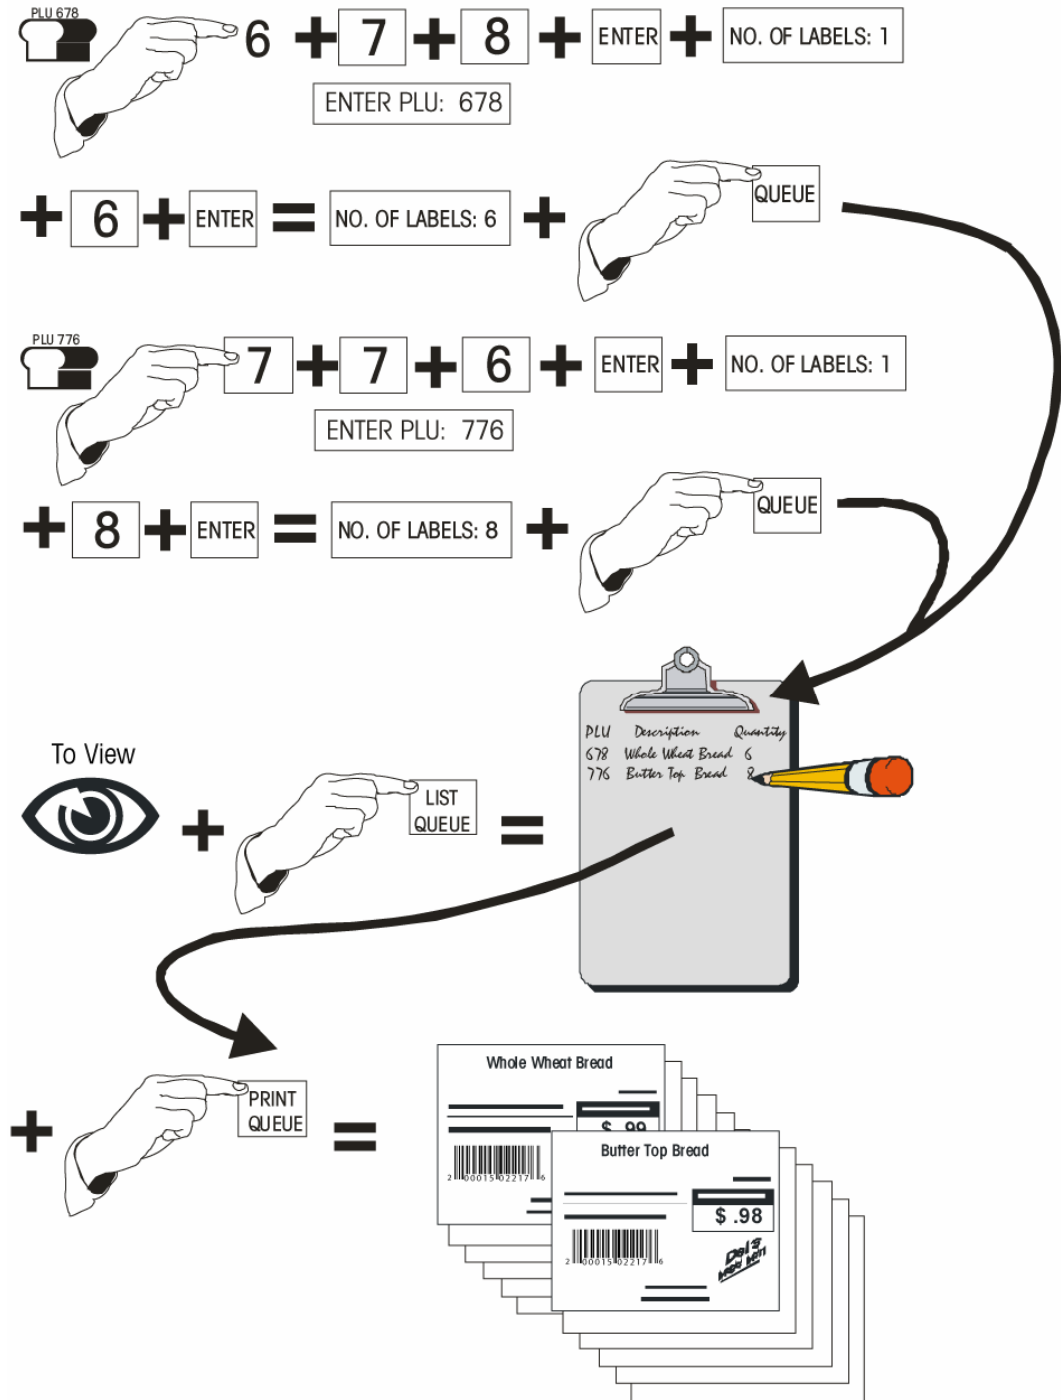


Zero the Scale

If zero (0.00) is not displayed when the scale is at the Main Screen (without any items on the platter) check for obstructions touching the platter, then touch the weight display.

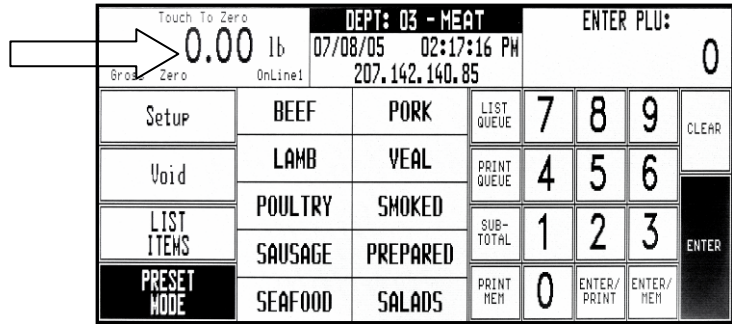

Label Feed

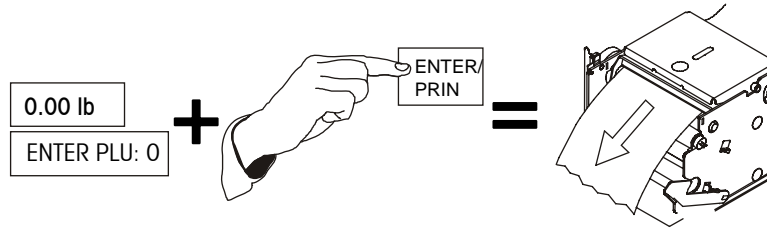

Calling PLU Records

PLU (Price Look Up) records are called (retrieved from file) two ways: Numeric Entry (Enter the PLU number on the keyboard), or Preset Entry (touch one of the preset keys.)

Numeric Entry Method

If the Preset PLU entry screen is displayed, touch the NUMERIC key. This will select the Numeric entry screen for transactions. To call a PLU record, enter the PLU number on the numeric keypad, then touch the ENTER or ENTER/PRINT key.

Touch To Zero 0.00 lb Gross Zero		DEPT: 00 - 05/19/06 01:14:20 PM 172.18.54.119		ENTER PLU: 0			
Setup	BEEF	PORK	LIST QUEUE	7	8	9	CLEAR
Void	LAMB	VEAL	PRINT QUEUE	4	5	6	
LIST ITEMS	POULTRY	SMOKED	SUB-TOTAL	1	2	3	ENTER
PRESET MODE	SAUSAGE	PREPARED	PRINT MEM	0	ENTER/PRINT	ENTER/PRINT	

1. Key in PLU number. (Ex: 123)

Numeric Entry Screen

2. Press ENTER or ENTER/PRINT

Preset Method

When a preset key is touched, the screen shown below will display. To call a preset PLU, touch one of the preprogrammed preset PLU keys.

Press a Preset Key to call up preset PLUs.

Touch To Zero 0.00 lb Gross Zero		OnLine1		BEEF		Numeric	Void	Page Forward
						Setup	Select Page	Page Backward
BEEF CHUCK ROAST	WFM NATURAL BEEF	BEEF EYE OF RND STK	DIESTEL ORGANIC ROAST	BF CHUCK SHLDR RST	BEEF CHUCK TENDER ROAST	BEEF BOTTOM RND RUMP RST		
BEEF TOP ROUND ROAST	BEEF PRIME RIB ROAST	BEEF PRIME RIB ROAST	BEEF TENDERLOIN	BEEF SIRLOIN TIP ROAST BO	BEEF EYE OF ROUND ROAST	BEEF BRISKET TRIMMED		
BF CHUCK SHLDR RST	BEEF LONDON BROIL TOP	BEEF TOP ROUND STEAK	BEEF SKIRT STEAK	BEEF SKIRT STK BONELESS	BEEF FLANK STKBONELESS	BEEF FLANK STEAK		
BEEF SIRLOIN TIP STEAK BO	BEEF RIBEYE STEAK	BEEF RIB STEAK BONE	BEEF TOP LOIN NY STRIP ST	BEEF TENDERLOIN	BACON WRAPPED BEEF	BEEF LION PORTERHOUSE		
BEEF LOIN T-BONE	BONELESS BEEF	BEER CHUCK EYE THIN CUT	BEEF SIRLOIN CUBES	BEEF ROUND STEW MEAT	BEEF CHUCK SHORT RIBS	BEEF BACK RIBS		

Preset Screen

PLU Edit Screen

After a PLU is selected, the PLU Edit screen will display. This display will differ depending on the PLU types used. If enabled in setup, certain items will be "double boxed" and can be manually overwritten by touching the appropriate box and following instructions. All changes made through this screen will be for the current transaction only and the changes will not be saved to the PLU record.

The PLU Edit Screen interface is divided into several sections:

- Top Row:**
 - WEIGHT:** 0.76 lb (Net)
 - TARE WEIGHT:** 0.02 (lb)
 - UNIT PRICE:** 7.99 (- \$ / lb -)
 - TOTAL PRICE (\$):** 6.07
- Second Row:**
 - PL. DESCRIPTION:** TROUT, LAKE
 - SERVICE:** Button
 - CLEAR:** Button
- Third Row:**
 - PACK DATE:** 05/23/06
 - SHLF-LIFE:** 05/28/06
 - USE-BY DATE:** 05/30/06
 - GRADE:** Button
 - MEMORY:** Button
- Fourth Row:**
 - EXTRA TEXT:** FRESH CATCH OF THE DAY
 - LABEL FORMAT:** Button
 - PRINT:** Button
- Fifth Row:**
 - AUTO:** Button

Annotations and Functions:

- Net Weight:** (random weight PLUs) or Quantity (By-Count or Standard Pack PLUs).
- Tare weight:** displays on random weight PLUs.
- Unit Price:** for By-Weight and By-Count PLUs, or the Net Weight on Standard Pack PLUs.
- Service/Prepack:** (only on By-Weight PLUs) toggles between the two modes. Service clears the PLU after the transaction. Prepack retains the PLU information until CLEAR is pressed.
- No. Of Labels:** appears only on Std Pack/By-Count PLUs.
- Total Price:** Ends the transaction and returns to the home screen.
- MEMORY:** enters the transaction into memory mode to print a receipt type label.
- TOTALS:** In prepack mode, allows printing subtotal or grand total labels.
- QUEUE:** Enters a By-Count or Std.Pack PLU in a batch queue for later printing of the complete batch.
- PRINT:** Prints a label.
- GRADE:** Used to select a different Grade.
- LABEL FORMAT:** Changes the accumulator for the current transaction.
- AUTO:** Selects a different label format from a choice of 8 for the current transaction.
- EXTRA TEXT:** Displays current Extra Text information. If pressed, used to select an alternate ET record.
- SHLF-LIFE:** Displays current Shelf-Life. If double boxed, the Shelf-Life can be changed by pressing here.
- USE-BY DATE:** Displays current Use-By date. If double boxed, the Use-By Date can be changed by pressing here.
- PACK DATE:** Displays current date.
- PL. DESCRIPTION:** Displays the PLU description.

PLU Edit Screen

By-Weight PLU

Service Mode

Call the PLU. If PREPACK is displayed on the EDIT screen, touch that key to toggle to SERVICE. Place the item on the platter and touch PRINT to issue a label. When the item is removed from the platter, the PLU will automatically clear.

Prepack Mode

Call the PLU. If SERVICE is displayed on the EDIT screen, touch that key to toggle to PREPACK. Place the item on the platter. A label will automatically issue. Take the label and remove the item from the platter. The PLU will remain on the screen to weigh additional items. Place the next item on the platter to print the next label. Touch CLEAR when you are finished weighing.

The By-Weight PLU Edit Screen is shown below. By-Weight PLUs can be priced in three ways:

1. Priced "**Per Pound**" - Typically weighed items are priced per the pound. The weight multiplied by the unit price equals the total price of the product to the customer.
2. Priced "**Per Fraction of a Pound**" (fractional) - The item may also be priced by the fraction of the pound (where legal and desired). Pricing per 1/4 pound and per 1/2 pound is available.
3. "**Pounds for**" price - The PLU may be sold with pounds-for pricing (rather than price per pound). (e.g. 2 pounds for \$1.00).

WEIGHT		TARE WEIGHT	UNIT PRICE	TOTAL PRICE (\$)
0.76 lb		0.02	7.99	6.07
Net		(lb)	- \$ / lb -	
PLU DESCRIPTION				
TROUT, LAKE			SERVICE	CLEAR
PACK DATE	SHELF-LIFE	USE-BY DATE	GRADE	MEMORY
05/23/06	05/28/06	05/30/06	LABEL FORMAT	PRINT
FRESH CATCH OF THE DAY			AUTO	

By Weight PLU Edit Screen

Notes: Depending on the setting of the function "Print after Motion" and "Print Key Always Active" your scale may function differently than described above. If the set up function "Print After Motion" is set to NO, you will need to press the PRINT button to print a label for each item. When this is set to YES (the factory default setting), the label prints automatically after you place the item on the platter.

If the function "Print Key Always Active" is set to YES, the PRINT key will issue a label when pressed. If set to NO, the PRINT key will only print one label per item.

Standard Pack PLU

If the PLU is priced as a Standard Pack item, enter the quantity of labels desired (default is 1), then touch PRINT to print labels. Touch the screen area to stop printing.

The Standard Pack PLU allows the operator to use the scale for a labeling operation. Generally, the labels indicate the net weight of the item and total price. A Standard Pack PLU edit screen is shown below.

CONTENTS/QTYS: 1 OnLine1			NET WEIGHT 16.0 oz	TOTAL PRICE (\$) 2.99
PLU DESCRIPTION BUTTERTOP WHOLE WHEAT 1 LB LOAF			NO. OF LABELS: 1	CLEAR
PACK DATE 07/08/06	SHELF-LIFE 07/14/06	USE-BY DATE 07/14/06	GRADE	MEMORY
GREAT TOASTED OR WITH OUR NEW GOURMET JAMS AND PRESERVES.			LABEL FORMAT	PRINT
			AUTO	

Standard Pack PLU Edit Screen

By-Count PLU

If the PLU is priced as a By-Count item, enter the quantity of labels desired (default is 1), then touch PRINT to print labels. Touch the screen area to stop printing. A By-Count PLU edit screen is shown in below.

CONTENTS/QTYS: 12 OnLine1			UNIT PRICE 0.34 - \$ / 1 -	TOTAL PRICE (\$) 3.99
PLU DESCRIPTION CHOCOLATE CHIP COOKIES®			NO. OF LABELS: 1	CLEAR
PACK DATE 07/08/06	SHELF-LIFE 07/18/06	USE-BY DATE 07/20/06	GRADE	MEMORY
WARNING INSTRUCTIONS SET OVEN TO 350 DEGREES. BAKE FOR 15 MINUTES.			LABEL FORMAT	PRINT
			AUTO	

By Count PLU Edit Screen

Manual PLU

A manual PLU is a PLU that has been programmed at the master for the "Manual" pricing mode. This allows a general PLU that can be used for incidental items that do not have a permanent PLU record. If a manual PLU is selected, a screen will be displayed to select the Pricing Mode. Touch the appropriate mode, then touch ENTER. The corresponding PLU Edit screen will be displayed, along with a numeric keyboard requesting essential data (such as count, prices, etc.). Adjust the fields as necessary, then touch PRINT to print a label.

Manual Overrides

PLU fields that are double-boxed in the PLU Edit screen can be changed. Instructions on editing fields follow.

Manual Unit Price

The **Unit Price** applies only to By-Weight or By-Count PLUs. Enter the new Unit Price through the numeric keyboard. The Total Price will be recalculated using the new Unit Price and the current Weight (By-Weight PLUs) or Count (By-Count PLUs) to adjust for the change in the Unit Price.

Manual Count

The **Count** applies only to By Count or Standard Pack PLUs. Enter the new Count through the numeric keyboard. For By-Count PLUs, the Total Price will be recalculated based on the new Count and the current Unit Price. For Standard Pack PLUs, the Net Weight and Total Price will be recalculated based on the new Count and the current values of the Net Weight and Total Price.

Manual Total Price

The **Total Price** can only be adjusted on By-Count or Standard Pack PLUs. Enter the new Total Price through the numeric keyboard. For By-Count PLUs, the Unit Price will automatically be recalculated based on the new Total Price and the current Count. For Standard Pack PLUs, changing the Total Price does not affect any other values.

Manual Net Weight

The **Net Weight** can only be adjusted on Standard Pack PLUs. Changing the Net Weight will not affect any other values.

Manual Tare

The **Tare Weight** only applies to By-Weight PLUs. After emptying the platter, enter the value of the tare weight through the Numeric Keyboard or place the empty container on the platter and touch the PLATTER TARE key. To clear a tare, touch the CLEAR TARE key. The Weight (and, consequently, the Total Price) will be adjusted based on the new Tare Weight. Note: If the platter is not empty, the "UNABLE TO CHANGE TARE" message will appear after the new value was entered. Empty the platter and try again.

Manual Shelf Life and Use-By Date

The Numeric keyboard will appear. Enter the new number of days from the current date or enter the exact date by typing the numeric month, numeric day, and last two digits of the year separated by the "Slash (/)" key.

Manual Extra Text

The numeric keyboard will appear with the current extra text number displayed. (Extra text is programmed through the Master Editor, see Master Programming Manual.) Enter the new extra text number.

Operator Totals

Operator Totals allow totals to be recorded for up to 30 operators per department. Operators are defined by number and name in the **SmartTouch®** Master or scale server. They must then be enabled in **Unit Setup -> PLU Options**.

Once Operator Totals have been enabled, when in the PLU prior to printing a label you will be prompted to enter your operator number.

WEIGHT 1.00 lb Net OnLine1		TARE WEIGHT 0.07 (lb)	UNIT PRICE 2.48 - \$ / lb -	ENTER OPERATOR#: 7			
PLU DESCRIPTION BAVARIAN HALF HAM WATER ADDED - FARMLAND		SERVICE	7	8	9	CLEAR	
PACK DATE 07/06/06	SHELF-LIFE	SE-BY DATE 07/06/06	GRADE	LOT	4	5	6
		LABEL FORMAT	1	2	3	ENTER	
		AUTO	0	.	BACK SPACE		

Operator Number Entry

Memory Mode

When enabled, this feature allows the user to accumulate the items purchased by a customer. When the sale is complete, an itemized receipt can be printed showing the grand total and department bar code.


Touch To Zero 0.00 lb Gross Zero		DEPT: 00 - 05/19/06 01:14:20 PM 172.18.54.119		ENTER PLU: 0			
Setup	BEEF	PORK	LIST QUEUE	7	8	9	CLEAR
Void	LAMB	VEAL	PRINT QUEUE	4	5	6	
LIST ITEMS	POULTRY	SMOKED	SUB-TOTAL	1	2	3	ENTER
PRESET MODE	SAUSAGE	PREPARED	PRINT MEM	0	ENTER/PRINT	ENTER/MEM	
	SEAFOOD	DELI					

Main Screen

Key in the PLU number and press ENTER. When the PLU Edit screen displays, press the MEMORY key to enter the transaction. You can continue to add new transaction to the memory.

CONTENTS/QTZ: 12 OnLine1		UNIT PRICE 0.34 - \$ / 1 -	TOTAL PRICE (\$) 3.99
PLU DESCRIPTION CHOCOLATE CHIP COOKIES®		NO. OF LABELS: 1	CLEAR
PACK DATE 07/08/06	SHELF-LIFE 07/18/06	USE-BY DATE 07/20/06	GRADE MEMORY ←
WARNING INSTRUCTIONS SET OVEN TO 350 DEGREES. BAKE FOR 15 MINUTES.		LABEL FORMAT	PRINT
		AUTO	

Back on the Main screen, when finished with the customer, press the SUBTOTAL key. A window will then appear that displays the number of pieces, total price, and four options. When "Department" memory is active, you will be asked for an operator number when adding to the memory.

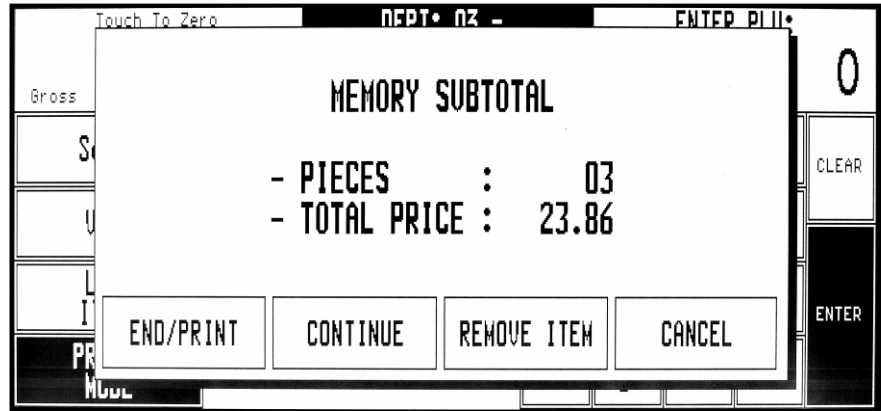

SUBTOTAL Screen and Options


1. **CONTINUE** to call up another item for the same customer and enter it into memory.
2. **REMOVE ITEM** to delete an item from the transaction memory by choosing it from a list. (See below)
3. **CANCEL** to delete the entire transaction and all items in memory (a confirmation prompt will appear).
4. **END/PRINT** to end the transaction and print the receipt (a confirmation prompt will appear after the receipt prints).

While in the memory mode, press **MEMORY** after each item is entered. If a separate label is also desired for each item, press **PRINT** to receive a label and then press **MEMORY** to continue. To prohibit the current item from being added to memory (before or after printing a label), press **CLEAR**. The memory screen will appear with the normal choices, but the "cleared" item will not be in the memory.

Notes:

- Press the **ENTER/MEM** key to do a quick transaction with a popup box that displays momentarily.
- When using die-cut labels, the number of items printed is limited to the label size in use. Continuous strip labels will allow for a greater number of transaction items.

To remove an item from memory, touch the item to remove it from the transaction list. Then touch **YES** to remove, or **NO** to cancel.

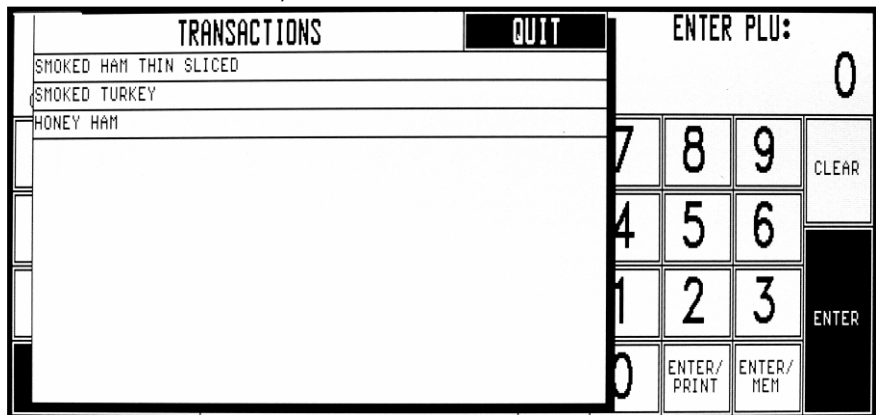

Remove Item Screen

Totals

In Prepack Mode, Run Totals can be printed by touching the **SUBTOTAL** or the **GRAND TOTAL** key. This will issue a label for the packages weighed during this transaction with the following possible items (depending on the label format): Item description, PLU number, UPC symbol, store address lines, dates, number of packages, weight, and dollars. After a Grand Total calculation, the records for the current transaction are cleared.

Country Of Origin Labeling

This section describes COOL operation if it is enabled set up properly on your scale. The COOL Text is normally programmed into the PLU record and this pre-programmed COOL statement will be called up with the PLU record. If allowed, you can over-ride this setting, as described in the following sections.

When COOL Text is enabled, the PLU Edit screen will show the programmed default text in a small box at the lower left of the screen. In addition, you may see a "LOT #" key shown next to the GRADE key that is used for a tracking number.

WEIGHT 1.27 lb Net		TARE WEIGHT 0.02 (lb)	UNIT PRICE 4.99 - \$ / lb -	TOTAL PRICE (\$) 6.34
PLU DESCRIPTION BEEF CHUCK TENDER ROAST BONELESS			SERVICE	CLEAR
PACK DATE 07/07/06	SHELF-LIFE 07/11/06	USE-BY DATE 07/11/06	GRADE	LOT #
Beef, water, Rub (spices, paprika), salt, sodium lactate, isolated soy protein, dextrose, sodium phosphate, garlic powder, smoke flavoringP			LABEL FORMAT	PRINT
Born In-Canada;Harvested In-Canada;Pro			AUTO	

PLU Edit Screen with COOL Text Enabled

If the COOL Text box has a double line around it, the default text can be over-ridden from the PLU Edit screen. If COOL Text is Forced, when you call up a PLU record, you will immediately be shown the COOL Text selection screen as shown below.

PLU: 6005 BEEF CHUCK TENDER ROAST BONELESS	NO COOL Required
LAST: Born In-Canada;Harvested In-Canada;Processed In-USA	C U S T O M
Born In-Canada;Harvested In-Canada;Processed In-USA	
Harvested In-Mexico;Processed In-USA	C A N C E L
Imported from-Argentina	
Product Of-Venezuela	P a g e D O W N
Born In-Mexico	
Harvested In-Mexico	E N T E R
Product Of-Mexico;Processed In-USA	

COOL Text Selection Screen (Standard Mode)

PLU: 6005 BEEF CHUCK TENDER ROAST BONELESS	Farm-Raised	NO COOL Required
Born In-Canada;Harvested In-Canada;Processed In-USA		
Born In-Canada;Harvested In-Canada;Processed In-USA		
Born In-Canada;Harvested In-Canada;Processed In-USA		
Harvested In-Mexico;Processed In-USA		
Imported from-Argentina		
Product Of-Venezuela		
Born In-Mexico		
		ENTER

C U S T O M	Page UP
C A N C E L	Page DOWN

COOL Text Selection Screen (Restricted Mode)

You can build your own custom statements by using the Custom COOL function. Selections will show up on the screen as they are selected. Press the UNDO button to erase the last entry. Press the ENTER key to continue, the CANCEL key to quit, or the NO COOL Required key for no COOL text.

Farm-Raised Imported From-Mexico;Processed In-Brazil			
PRODUCTION STEP		Farm-Raised	COUNTRY
Harvested In		Mexico	
Imported From	Page UP	Dominican Republic	Page UP
Raised In		France	
Born In	Page DOWN	Brazil	Page DOWN
Product Of		USA	
Processed In		Canada	
		UNDO	
		CANCEL	
		CLEAR	
		ENTER	

Custom COOL Screen

You may be required to select or add a Tracking Number. The tracking number select and edit screens are shown below.

CHOOSE TRACKING NUMBER TO EDIT

12B99F682GH1463CCU9S1	CANCEL
22J89532CH1C86RR2	

ENTER

Select or Edit Tracking Number


ENTER LOT NUMBER

1 2 B 9 9 F 6 8 2 G H 1 4 6 3 C C U 9 S 1

<< ERASE >>		7	8	9									
		4	5	6									
		1	2	3									
QUIT	Q	W	E	R	T	Y	U	I	O	P	0	.	BACK SPACE
CAPS LOCK	A	S	D	F	G	H	J	K	L	:	;	ENTER	
SHIFT	Z	X	C	V	B	N	M	<	>	?	/	SPACE	

Edit Tracking Number Screen

Standalone Mode DB Editor

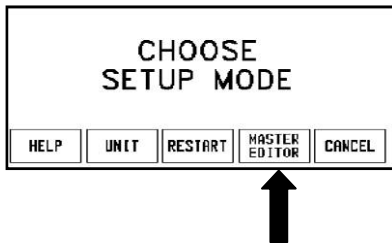

There are limited Quick Edit functions on the standalone. You can change prices, tare, Shelf Life, and Use-By dates. To add/remove or modify existing records, an external host program must be used, such as Wintelli-Net™ or Intelli-Net™.

The DB Editor can be protected by a password. If no password is used, anyone can access the Quick Change functions.

To access the EB Editor, touch SETUP then touch DB EDITOR (shown at left). If a password has been programmed, enter the password. The DB Editor screen is shown below.




Standalone DB Editor Screen

The **Quick** menu allows changes to individual fields of the PLU record in the Standalone Database without the need to step through the complete file for the following fields:


- Price
- Nutrifact Number
- Tare
- Shelf Life
- Use by
- Group
- Action Number
- Item Number
- Extra Text Number
- Grade

To make QUICK edits, first touch the **QUICK** menu option. Then select the option you wish to edit.

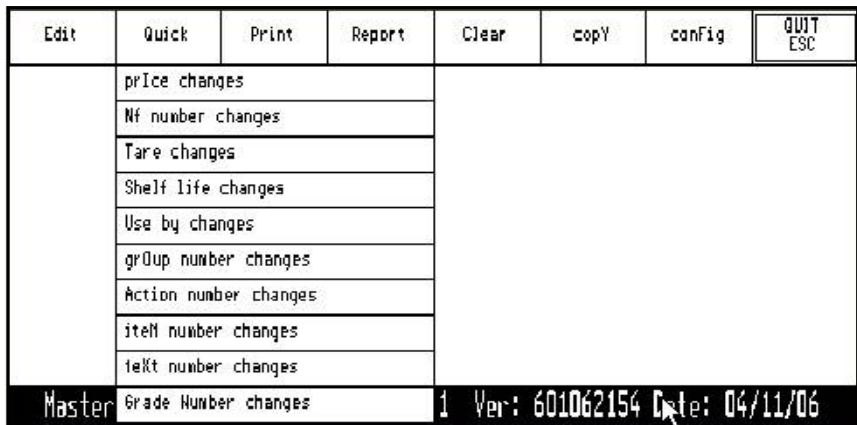

Quick Menu Options - DB Editor Screen

To configure the standalone, first touch **conFig** to display the drop down menu. Then select the option you wish to configure.

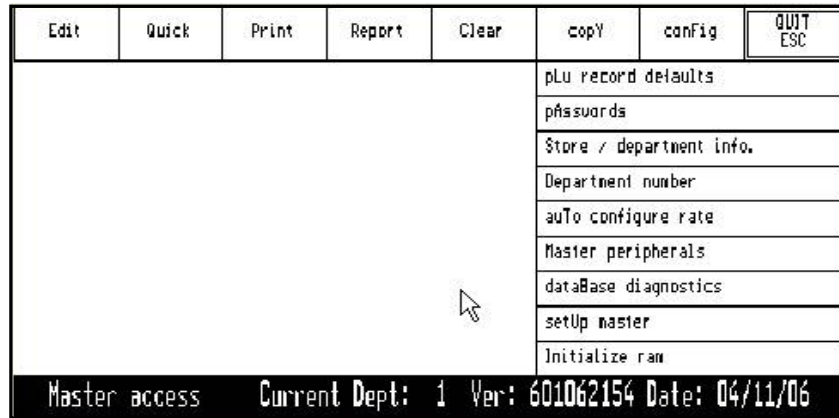

Configure Menu Options - DB Editor Screen

The configuration options under the CONFIG key are as follows and explained in detail in the following sections:

- PLU Record Defaults** Configure Accumulator Names and enable/disable duplicate Item Numbers.
- Passwords** Set the Master and Department passwords. To clear a password, enter a zero.
- Store/Department Info** Configure the Store Name and Address (used on reports), Department Name and Address (used on labels), Department UPC, and Operator Name and Number.
- Department Number** Used to select the Current Department (shown at the bottom of the screen) for programming and configuration in the Master Editor.
- Auto Configure Rate** Auto Configure Rate is the automatic transmission of satellite addresses (along with a request for connection command) to addresses not yet connected to the network. This eliminates the need to enter all of the Unit ID's manually. This value (1 to 5) is the number of seconds between network autoconfigure sequences. The default is 5.
- Master Peripherals** Configure the master report printer and host serial ports
- Database Diagnostics** Used for factory testing only.
- Setup Master** Select the weight increment, currency symbol, date format, date separator, time format, barcode style, obsolete PLUs, and Master Network setup.
- Initialize Ram** ***WARNING! This selection clears all records from the database.*** This selection must be used to set up new masters before programming records or downloading files. This selection can also be used to clear the RAM if a corruption is suspected in the database. If attempting to salvage records due to a corruption, first use Intelli-Net or DataBack to backup any usable records, then reload the database after initializing.

METTLER TOLEDO

For your notes


5

Maintenance


Before Performing Maintenance!

First Disconnect power! "Disconnect power" means: "Press the **O** on the Power Switch to turn power off (1), then disconnect the AC power cord from the AC outlet (2)."



1. Press OFF on the power switch.

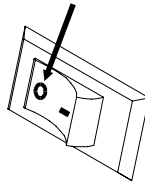


2. Remove the power cord from the AC outlet.

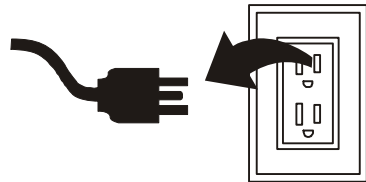

External Cleaning

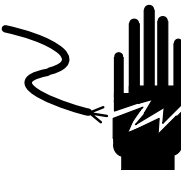	 WARNING
	DISCONNECT ALL POWER TO THIS UNIT BEFORE INSTALLING, SERVICING, CLEANING, OR REMOVING THE FUSE. FAILURE TO DO SO COULD RESULT IN BODILY HARM AND/OR PROPERTY DAMAGE. DO NOT SPRAY OR WASH DOWN. HAZARD OF ELECTRICAL SHOCK OR BURN.

- Disconnect power.
- Do not use solvents or commercial cleaners on the unit. They may harm the surfaces or damage the touchscreen.
- **Do not spray directly on or at the unit**
- **Touchscreen - Only** use a soft clean cloth dampened with mild detergent and water to clean the Touchscreen.
- **Covers and Platter** – Clean using a soft clean cloth dampened with a mild cleaner or detergent and water.

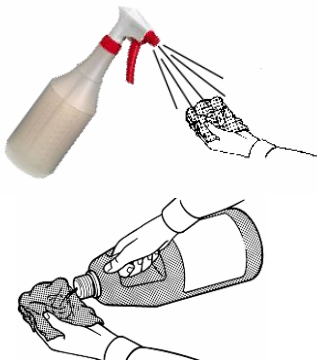

Internal Cleaning



Do not use a metal device to remove labels from any components. This may cause severe damage.

Do not scrape the printhead with any object to remove glue or label debris.

	WARNING
	DISCONNECT ALL POWER TO THIS UNIT BEFORE REMOVING THE FUSE OR SERVICING.

Turn power OFF by placing the Power Switch to the *OFF* position (press the *O* on the switch), then disconnect the power cord from the AC outlet. Remove the printer access cover. **DO NOT USE A METAL DEVICE TO REMOVE LABELS FROM COMPONENTS OR SEVERE DAMAGE MAY RESULT. DO NOT SCRAPE THE PRINTHEAD WITH ANY OBJECT TO REMOVE GLUE OR LABEL DEBRIS.**



To clean the printer, unlock the printhead by lifting the rear of the printhead assembly forward and up at the same time. Once the rear of the assembly is unlocked, lift the front of the printhead assembly. Refer to Figure 5-1. Remove the paper stock and clean the printhead and paper path with a soft clean cloth soaked in isopropyl alcohol, METTLER TOLEDO Liquid Cleaner (p/n 12587500A) or equivalent (ISC108-B), or the METTLER TOLEDO Cleaning Pen (p/n 082287020).

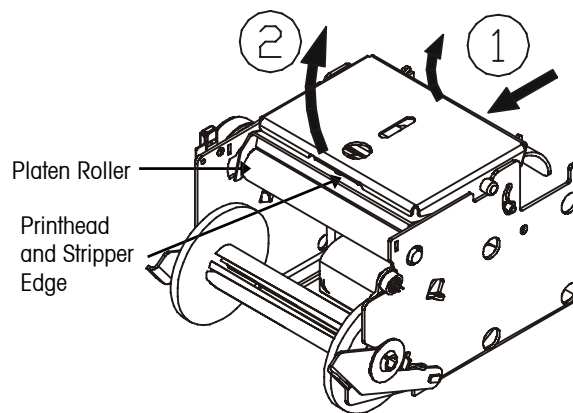


Figure 5-1: Unlocking the Printhead

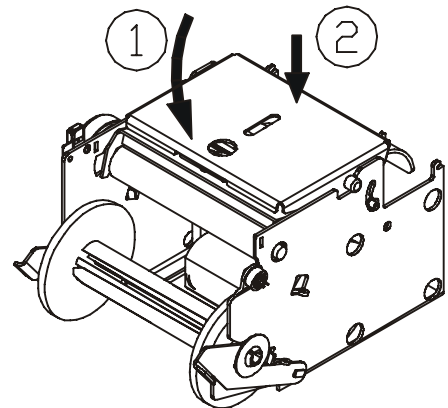


Figure 5-2: Locking the Printhead

Note: Before pressing down the printhead, hold the bottom of the printer to prevent the scale from tipping if the foot clamp is not used.

To lock the printhead back down into the printing position first lower the front of the printhead assembly down onto the platen roller. Once the front of the printhead assembly is down on the platen roller then firmly press the rear of the printhead assembly down until it snaps into place. Use even pressure across the rear of the printhead assembly so that both assemblies snap down. Refer to Figure 5-2.



ServiceXXL®
Tailored Services



Quality certification. Development, production, and auditing in accordance with ISO9001. Environmental management system in accordance with ISO14001.

Worldwide service. Our dense service network, among the best in the world, ensures the maximum availability and lifespan of your product.

Conformité Européene

This label is your guarantee that our products conform to the latest guidelines.

On the Internet. You can find important information about our products and services, as well as our company, quickly and easily at <http://www.mt.com/support>



METTLER TOLEDO
1900 Polaris Parkway
Columbus, Ohio 43240
www.mt.com

METTLER TOLEDO® and **SmartTouch®**
are registered Trademarks of Mettler-Toledo, Inc.
©2006 Mettler-Toledo, Inc.
Printed in USA



64056468